

# Installation Guide

## 安裝說明書

VEHICLE APPLICATIONS  
適用車型


SUZUKI SWIFT 3rd ZC32 2011-

PART NO. 8585

### Contents 內含配件

※ Please apply hand tools for installation  
安裝過程請使用手動工具

1. Rear sway bar 後防傾桿 17mm 1PCS
2. Bracket (RH&LH) 防傾桿固定支架 (R/L) 2PCS
3. Button Head Socket Cap Screws  
半圓頭內六角螺絲M10 6mm 6PCS
4. Flat washer 平華司M10 6PCS
5. Nylon insert nut  
尼龍防鬆螺帽M10 6PCS
6. Flanged lock-nut 凸緣防鬆螺帽 4PCS

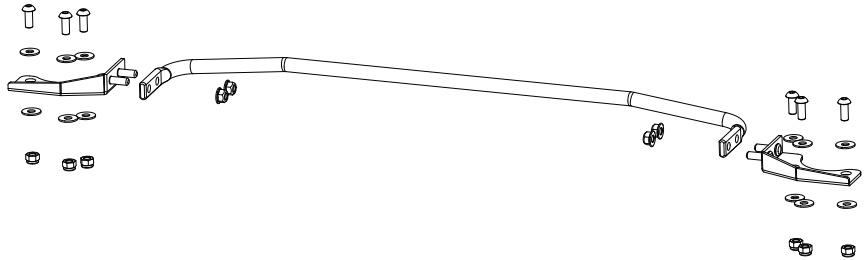


### Installation tips 安裝提示

※ Please read the HARDRACE Tech Tips before installing the products.  
在安裝之前請詳閱 HARDRACE 技術提示



Combine the M10 button head socket cap screws and M10 flat washer together then insert the screws into the holes on the RH/LH spring seats (As shown above). Install and lock RH&LH brackets using M10 flat washers and M10 nylon insert nuts.

將半圓頭內六角螺絲M10加入平華司M10，放入彈簧托盤孔位（如照片所示），再將固定支架安裝上，使用平華司M10及尼龍M10防鬆螺帽鎖上（鎖緊扭力70Nm）

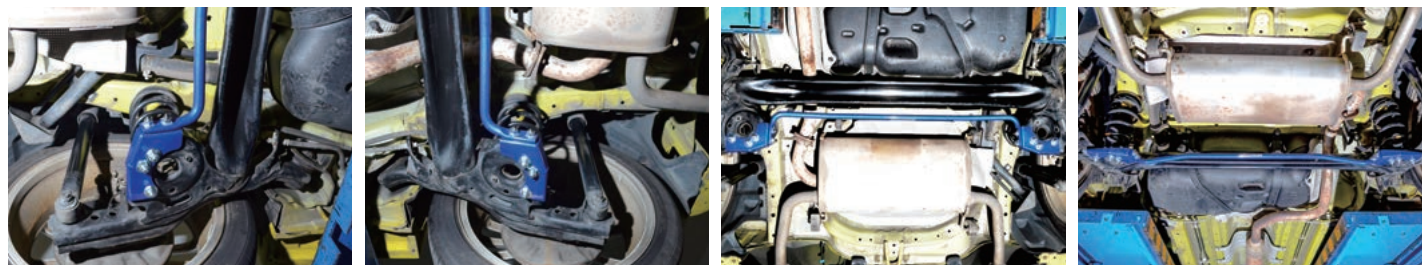

Fix the rear sway bar onto the bracket using M10 flanged nuts (Torque=70Nm)  
將防傾桿與固定支架組合，使用凸緣防鬆螺帽M10（鎖緊扭力70Nm）

### HARDRACE Tech Tips 技術提示

Warning! Risk of Death may be caused by vehicle slipping or toppling off the jacking platform.

警告! 在頂車機的作業下，車輛的滑動或倒塌可能會造成人員致命的危險

Motor vehicle mechanical knowledge is expected. In some country & states, fitment may only be legally performed by a licensed mechanic. Check the regulation in your area.

請預先了解車輛機械知識與檢察在您所屬的國家或區域地方是否需要專業技師執照才可執行更換安裝，以免觸法

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027  
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

