

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


AUDI A3/S3 MK2 8P 2004-2013
VOLKSWAGEN GOLF/JETTA/VENTO MK5/MK6 2004-2013 / SCIROCCO MK3 2008-ON
VOLKSWAGEN TIGUAN 5N 2009-
VOLKSWAGEN BEETLE A5 2011-ON
VOLKSWAGEN PASSAT B6/B7 2005-2014 / CC 2008-on
SKODA OCTAVIA MK2 2004-2012 / YETI MK1 2009-ON
SKODA SUPERB B6 2008-ON
SEAT LEON MK2 2005-2012 / ALTEA MK1 2003-ON / TOLEDO MK3 2004-2009

PART NO. 7716

Contents 內含配件

※ Please apply hand tools for installation
安裝過程請使用手動工具

1. Rear Sway Bar 22mm 後防傾桿 1PCS
2. Rear Stabilizer Bush 後防傾桿固定橡皮 2PS

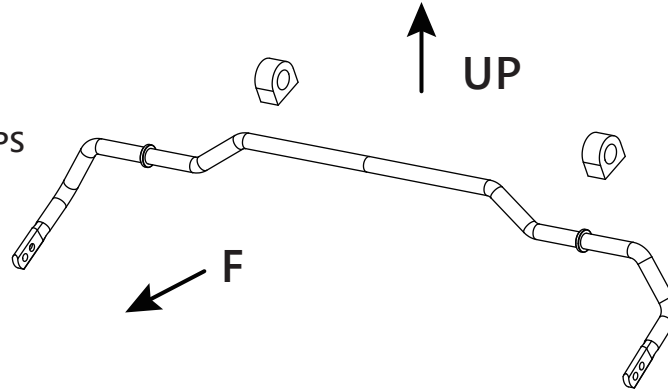

Installation tips 安裝提示

※ Stabilizer bushings are Self-lubrication. Do not apply grease.
HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑



Torque for bolts
螺絲鎖緊扭力：
M8-60Nm
M10-80Nm
M12-100Nm
M14-160Nm

Screw locking-glue and 4-wheel alignment are recommended.
建議使用螺絲防鬆膠及電腦四輪定位校正

2 Holes, adjustable design. 可調軟/硬，雙孔設計

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

