

Installation Instructions

安裝說明書

REAR SWAY BAR BRACE

後防傾桿強化拉桿


#Q0078

Application 適用車型

Subaru Impreza (GE,GH) '07-14
Subaru Impreza WRX/STI (GV,GR) '07-13
Subaru WRX/STI (VA) '14-present
Subaru Levorg (VM) '14-present

Components 內含配件

- ① R. sway bar brace-RH 後防傾桿拉桿-右 1PCS
- ② R. sway bar brace-LH 後防傾桿拉桿-左 1PCS

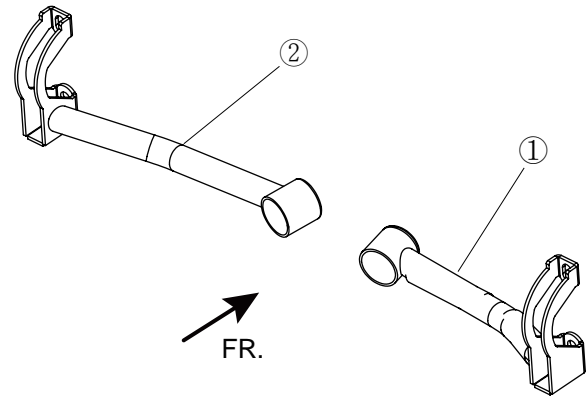

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle, remove the bolts securing rear lower control arms to rear subframe and the bolts of sway bar bushing mount brackets on both sides.
將車輛升起後拆卸固定後下控制臂於後副車架的螺絲以及防傾桿橡皮固定環上的螺絲。



2. Position ① Sway bar brace-RH & ② Sway bar brace-LH as shown in figureXX, then bolt on and tighten using the original bolts.

依照圖表放置 ①後防傾桿拉桿-右 及 ②後防傾桿拉桿-右，並沿用原螺絲將拉桿鎖上。



Illustration of installed state
完成示意圖