

# Installation Instructions

## 安裝說明書

FRONT SWAY BAR

強化前防傾桿


#Q0123

### Application 適用車型

Suzuki Swift (ZC33) '17-Present

### Components 內含配件

- |                               |      |
|-------------------------------|------|
| ① F. sway bar 前強化防傾桿 (25.4mm) | 1PCS |
| ② Sway bar bushing 強化防傾桿橡皮    | 2PCS |

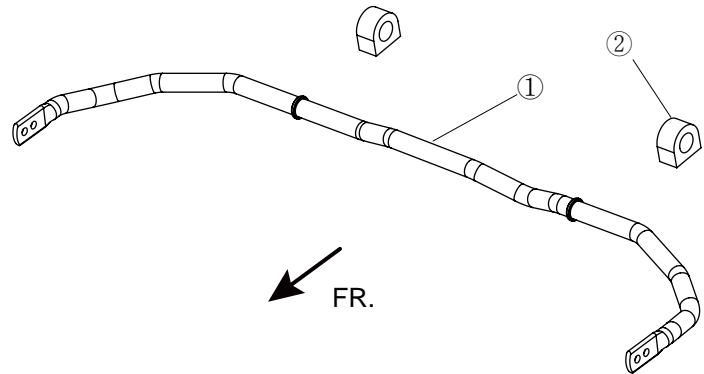

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

### Instructions 安裝說明

1. Jack up the vehicle, detach the engine mount, steering rack, sway bar end-links and lower control arm ball joints from the sub-frame.

車輛升起後將固定於副車架上的引擎腳、方向機、李仔串及三腳架和尚頭卸下。

2. Drop the front sub-frame to get access to the sway bar. Remove the factory sway bar mount brackets, bushings and sway bar.

降下副車架後鬆開原廠的防傾桿固定環。即可將原廠防傾桿含固定橡皮拆下。

3. Install ① Front sway bar and place ② Sway bar bushings, then tighten the sway bar to the sub-frame using the original bolts and mount brackets.

安裝 ① 強化防傾桿 及 ② 防傾桿橡皮。並沿用原廠固定環將防傾桿鎖上副車架。

4. Bolt on the sub-frame back to the vehicle, and then re-install the steering rack, engine mount, lower ball joints and sway bar end-links. Please have the vehicle professionally aligned after installation.

最後將副車架以及方向機、引擎腳、和尚頭以及李仔串鎖回原位。並於安裝完成後接受電腦四輪定位校正。



#### Note 提示

- Screw locking glue are recommended. 建議使用螺絲防鬆膠。
- Torque specification 上鎖扭力值  
M8-60Nm  
M10-80Nm  
M12-100Nm  
M14-160Nm