


## Application 適用車型

Mazda CX-3 '15-Present

## Components 內含配件

① Front lower brace 前下拉桿 1PCS

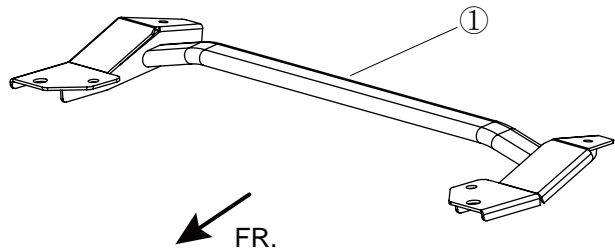

## Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

## Instructions 安裝說明

1. Jack up the vehicle, then remove the factory underbody shield.

將車輛升起後拆卸原廠底盤下隔熱板。



2. Remove the bolts on chassis and front sub-frame (Circled), then locate ① Front lower brace according to the holes.

拆卸底盤以及副車架的螺絲(畫圈處)，並依照孔位放置 ①前下拉桿。



3. Bolt on and tighten the brace using the original bolts, and re-install the factory shield.

沿用原螺絲將拉桿鎖上，再將原廠下隔熱板裝回原位。

