

Installation Instructions 安裝說明書

FRONT STRUT BRACE

引擎室拉桿


#Q0264

Application 適用車型

Suzuki Baleno '15-present

Components 內含配件

① Strut brace Central bar 中間桿	1pcs
Bracket-RH 支架-右	1pcs
Bracket-LH 支架-左	1pcs
② Hex socket screw 內六角螺絲 (M10x1.5x75)	2pcs
③ Flange bolt 凸緣螺絲 (M8x1.25x30)	1pcs
④ Flange bolt 凸緣螺絲 (M6x1.0x20)	2pcs
⑤ Socket Button cap screw 半圓頭內六角螺絲 (M5x0.8x15)	2pcs
⑥ Flange nut 凸緣螺帽 (M10x1.5-17x10)	2pcs
⑦ Flange nut 凸緣螺帽 (M8x1.25-12x7.5)	1pcs
⑧ Flange nut 凸緣螺帽 (M6x1.0-10x6)	3pcs
⑨ Flange nut 凸緣螺帽 (M5x0.8-8x5)	2pcs
⑩ Washer 華司 (20.8x10.7x2)	4pcs
⑪ Washer 華司 (16x8.4x1.4)	7pcs
⑫ Washer 華司 (12.3x6.5x1.5)	4pcs


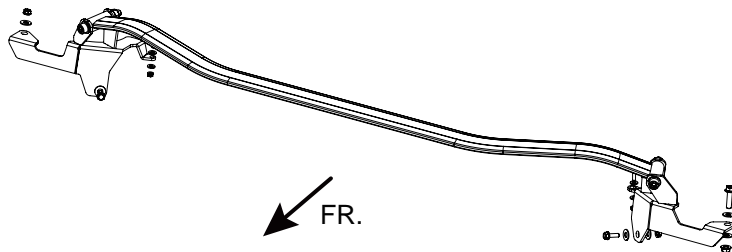


Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove front wheels to access the inside of wheel arches.
將前輪拆下以方便從輪拱內側施工。
2. Position brackets to strut towers on both sides, then install supplied bolts, nuts and washers as shown in below figure to secure the brackets.
將支架放置於兩側避震塔，並依照以下圖表安裝配件螺絲、螺帽及華司。

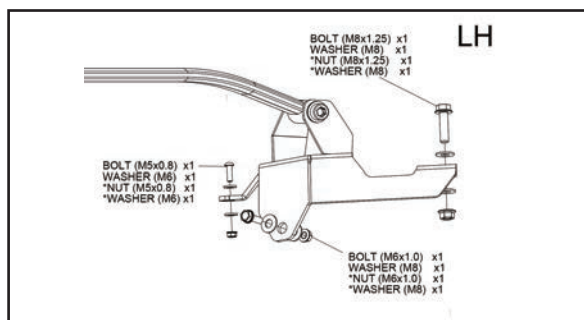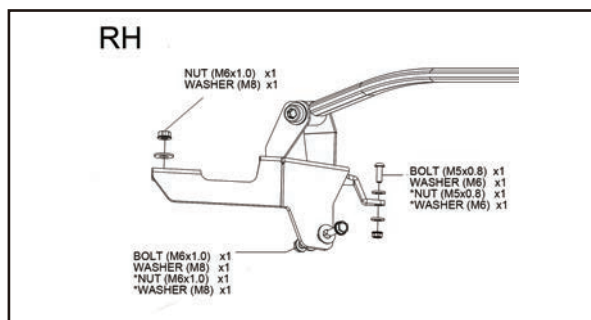

3. Install central bar to the brackets on both sides with supplied M10 bolts, nuts and washers.
使用配件M10螺絲、螺帽及華司，將中間桿安裝於兩側支架。

Illustration of installed state
安裝完成示意圖

