#Q0191

後樑拉桿

## 安裝說明書

# Application 適用車型


Volkswagen Tiguan MK2 '16-present

**Installation Instructions** 

#### Components 內含配件

① Brace 結構桿

2pcs

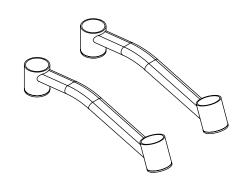

### Caution 注意事項

- •Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- •Note the routing and position of wires and cables before installation. Please refer to factory manual.
- •Tighten bolts and nuts frimly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全 · 否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置,或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲,或依照說明中標註的扭力上鎖。

#### Instructions 安裝說明

1. Remove the bolts between fuel tank and trailing arms on both sides. (See figure 1&2)

拆卸兩側位於油箱及後拖曳連桿間的螺絲。(參考圖一、二)



2. Install **Brace** to the vehicle, then reinstall the bolts to secure the brace. 安裝 **結構桿** · 並鎖回螺絲以將桿身固定。



Illstration of installed state 安裝完成示意圖







