


Application 適用車型

VOLVO V40 '13-19

Components 內含配件

① Brace 結構桿桿身..... 1pcs

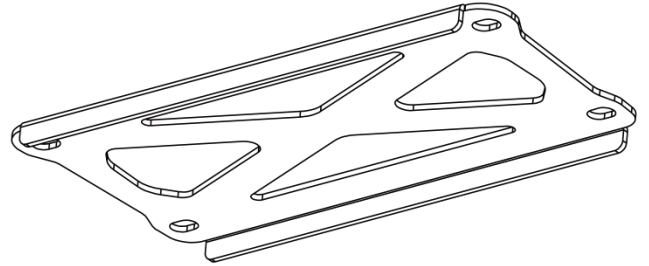

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove the 4 exhaust tunnel bolts.
將排氣管通道旁的四顆螺絲拆下。
2. Install the brace onto the vehicle.
將結構桿安裝於車輛上。
3. Reinstall the bolts to secure the brace.
將螺絲重新鎖上以固定支架。

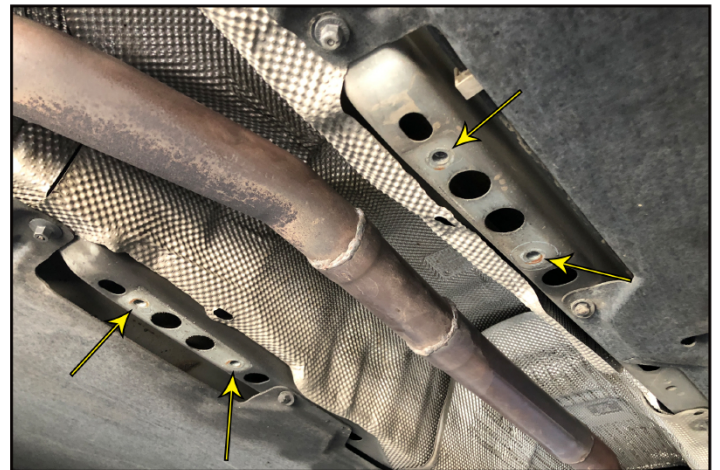


Illustration of installed state
安裝完成示意圖