

Installation Instructions

安裝說明書

REAR SUBFRAME BRACE

後樑下拉桿

#Q0345

Application 適用車型

FORD MONDEO MK5 2014-

Components 內含配件


① Brace 結構桿桿身.....1pcs

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Support rear subframe using a jack.
使用千斤頂將後副車架頂住。
2. Remove the rear subframe front mounting bolts.
拆卸後副車架前端固定螺絲。

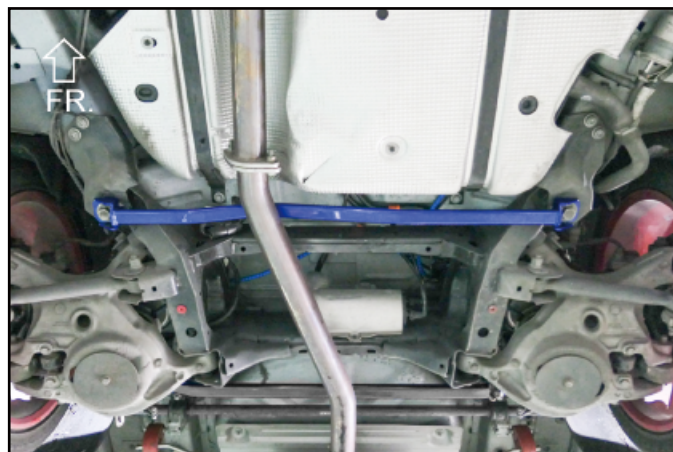

4. Install the brace to the subframe.
將結構桿桿身安裝至副車架。
5. Reinstall the bolts to secure the braces.
完成後鎖上螺絲以固定桿身。

▲ Illustration of installed state 安裝完成示意圖